



## Xtreme 6020 Fireplace

- Natural Gas - 98500325
- LP (Propane) - 98500326

### Built-In Direct-Vent Power-Vent Fireplace

This appliance is only for use with the type(s) of gas indicated on the rating plate.

**WARNING:** If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

#### WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Tested and Listed by



**! WARNING**



**HOT GLASS WILL CAUSE BURNS.  
DO NOT TOUCH GLASS UNTIL COOLED.  
NEVER ALLOW CHILDREN TO TOUCH GLASS.**

## Owner's Manual

**Installer:** After installation give this manual to the homeowner and explain operation of this fireplace.

© Copyright 2010, T.I. \$10.00 100-01247\_000  
4100329



TRAVIS INDUSTRIES  
HOUSE OF FIRE

[www.travisproducts.com](http://www.travisproducts.com)

4800 Harbour Pointe Blvd. SW  
Mukilteo, WA 98275

## Introduction

We welcome you as a new owner of a Xtreme 6020 gas fireplace. This manual details operation and maintenance of this fireplace. Please familiarize yourself with the Owner's Manual before operating your fireplace and save the manual for future reference.

## Important Information

No other Xtreme 6020 gas fireplace has the same serial number as yours. The serial number is on the listing label that is chained near the glass frame. This serial number may be needed in case you require service.

Model: Xtreme 6020 Fireplace

Serial Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Purchased From: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**Register your warranty online at:**

[traviswarranty.com](http://traviswarranty.com)

**Or, mail your warranty card to:**

Travis Industries House of Fire  
4800 Harbour Pointe Blvd. SW  
Mukilteo, WA 98275

**Save Your Bill of Sale.**

To receive full warranty coverage, you will need to show evidence of the date you purchased your fireplace. Do not mail your Bill of Sale to us.

We suggest that you attach your Bill of Sale to this page so that you will have all the information you need in one place should the need for service or information occur.

## Installation Warnings

- **Installation requirements are printed in the Xtreme 6020 Installation Manual (part # 100-01246). All requirements in the installation manual must be met.**
- **Failure to follow all of the requirements may result in property damage, bodily injury, or even death.**
- **This fireplace must be installed by a qualified installer who has gone through a training program for the installation of direct vent gas appliances.**
- **This appliance must be installed in accordance with all local codes, if any; if not, follow ANSI Z223.1 and NFPA 54(88).**
- **The fireplace is designed to operate on natural gas, or propane (LP).**
- **All exhaust gases must be vented outside the structure of the living-area. Combustion air is drawn from outside the living-area structure.**
- **Notify your insurance company before hooking up this fireplace.**

## Table of Contents

---

### Introduction and Important Information

Introduction ..... 2  
Important Information ..... 2  
Installation Warnings ..... 2  
Features ..... 3  
BTU Specifications ..... 3

### Safety Precautions

Safety Precautions ..... 4

### Operation

Before You Begin ..... 6  
Starting the Fireplace for the First Time ..... 6  
Remote Control ..... 6  
Setting Up the Remote (Time, Day, Swing, °F/°C) ..... 7  
Remote Synchronization ..... 8  
The Two Modes of Operation ..... 9  
Remote Functions ..... 10  
PROGRAM FUNCTION (7 day thermostat) ..... 11  
Continuous Pilot – NOT USED FOR THIS FIREPLACE ..... 12  
Normal Operating Sounds ..... 12  
Normal Operating Odors ..... 12  
Power Outages ..... 12  
Child Protection Feature ..... 12

### Maintenance

Yearly Service Procedure ..... 13  
Glass Cleaning ..... 13  
Accent Light Bulb Replacement ..... 13  
Replacement Parts List ..... 14  
Wiring Diagram ..... 15

### Warranty

Warranty ..... 16

### Index

Index ..... 18

## **Features**


---

- Optional Extr-Room Blower for Heat Distribution
- Built-In Accent Lights
- Convenient Operating Controls
- Low Maintenance

## **BTU Specifications**

---

	Natural Gas	Propane
Maximum BTU Input Per Hour	90,000	90,000

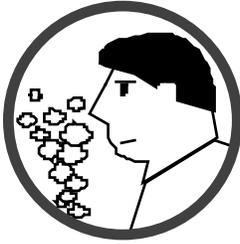
**IF YOU SMELL GAS:**

- \* Do not light any appliance
- \* Extinguish any open flame
- \* Do not touch any electrical switch or plug or unplug anything
- \* Open windows and vacate building
- \* Call gas supplier from neighbor's house, if not reached, call fire department



This unit must be installed by a qualified installer to prevent the possibility of an explosion. Your dealer will know the requirements in your area and can inform you of those people considered qualified. The fireplace should be inspected and cleaned before use and at least annually by a qualified service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc.

The instructions in this manual must be strictly adhered to. Do not use makeshift methods or compromise in the installation. Improper installation will void the warranty and safety listing.

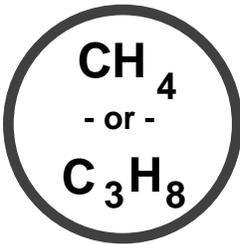

This fireplace is either approved for natural gas (NG) or for propane (LP). Burning the incorrect fuel will void the warranty and safety listing and may cause an extreme safety hazard. Direct questions about the type of fuel used to your dealer or installer



Operate the fireplace according to the instructions included in this manual.

If the main burners do not start correctly turn the gas off to the fireplace and call your dealer for service.



Contact your local building officials to obtain a permit and information on any installation restrictions or inspection requirements in your area. Notify your insurance company of this fireplace as well.



If the flame becomes sooty, dark orange in color, or extremely tall, do not operate the fireplace. Call your dealer and arrange for proper servicing.



It is imperative that control compartments, screens, or circulating air passageways of the fireplace be kept clean and free of obstructions. These areas provide the air necessary for safe operation.



Do not operate the fireplace if it is not operating properly in any fashion or if you are uncertain. Call your dealer for a full explanation of your fireplace and what to expect.



Do not store or use gasoline or other flammable liquids in the vicinity of this fireplace.



Do not operate if any portion of the fireplace was submerged in water or if any corrosion occurs. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been under water.



Do not place clothing or other flammable items on or near the fireplace. Because this fireplace can be controlled by a thermostat there is a possibility of the fireplace turning on and igniting any items placed on or near it.



Light the fireplace using the built-in electronic igniter. Do not use matches or any other external device to light your fireplace.

Allow the fireplace to cool before carrying out any maintenance or cleaning.




The viewing glass should be opened only for conducting service. Do not operate with cracked, broken, or removed glass.

Any safety screen or guard removed for servicing must be replaced prior to operating the fireplace.



Never remove, replace, modify or substitute any part of the fireplace unless instructions are given in this manual. All other work must be done by a trained technician. Don't modify or replace orifices.

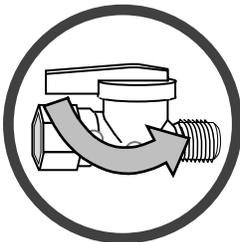

Prior to removing the glass, shut off gas to the appliance (or shut off electricity to the fireplace). This prevents any chance of accidental burner ignition when accessing the firebox.




Do not throw this manual away. This manual has important operating and maintenance instructions that you will need at a later time. Always follow the instructions in this manual.



This unit is not for use with solid fuel

Do not place anything inside the firebox (except the included fiber logs).

If the fiber logs become damaged, replace with Travis Industries log set.

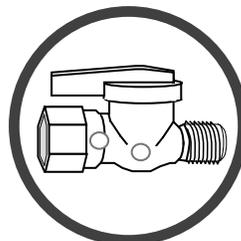

Instruct everyone in the house how to shut gas off to the appliance and at the gas main shutoff valve. The gas main shutoff valve is usually next to the gas meter or propane tank and requires a wrench to shut off.



Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition. Young children should be supervised when they are in the same room as the fireplace.



**Travis Industries, Inc. grants no warranty, implied or stated, for the installation or maintenance of your fireplace, and assumes no responsibility of any consequential damage(s).**



Operate the fireplace according to the instructions included in this manual.

If the main burners do not start correctly turn the gas off to the fireplace and call your dealer for service.

### Before You Begin


- Read this entire manual before you use your new fireplace (especially the section "Safety Precautions" on pages 4 & 5). Failure to follow the instructions may result in property damage, bodily injury, or even death.

### Starting the Fireplace for the First Time

- You may wish to burn the fireplace at a high setting for an extended period (up to 48 hours). This will cure the painted surfaces. **Fumes** from the paint curing and oil burning off the steel will occur. This is normal. We recommend opening a window to vent the room.
- **Condensation** may appear on the glass each time you start the fireplace - this is normal.
- **Blue Flames** will occur on the fireplace when it first comes on. After fifteen minutes the flames will turn a more realistic yellow and orange color.

### Remote Control

The remote control controls all of the functions on the fireplace. It can be placed inside the holder and hung on the wall or it can be placed near the fireplace.

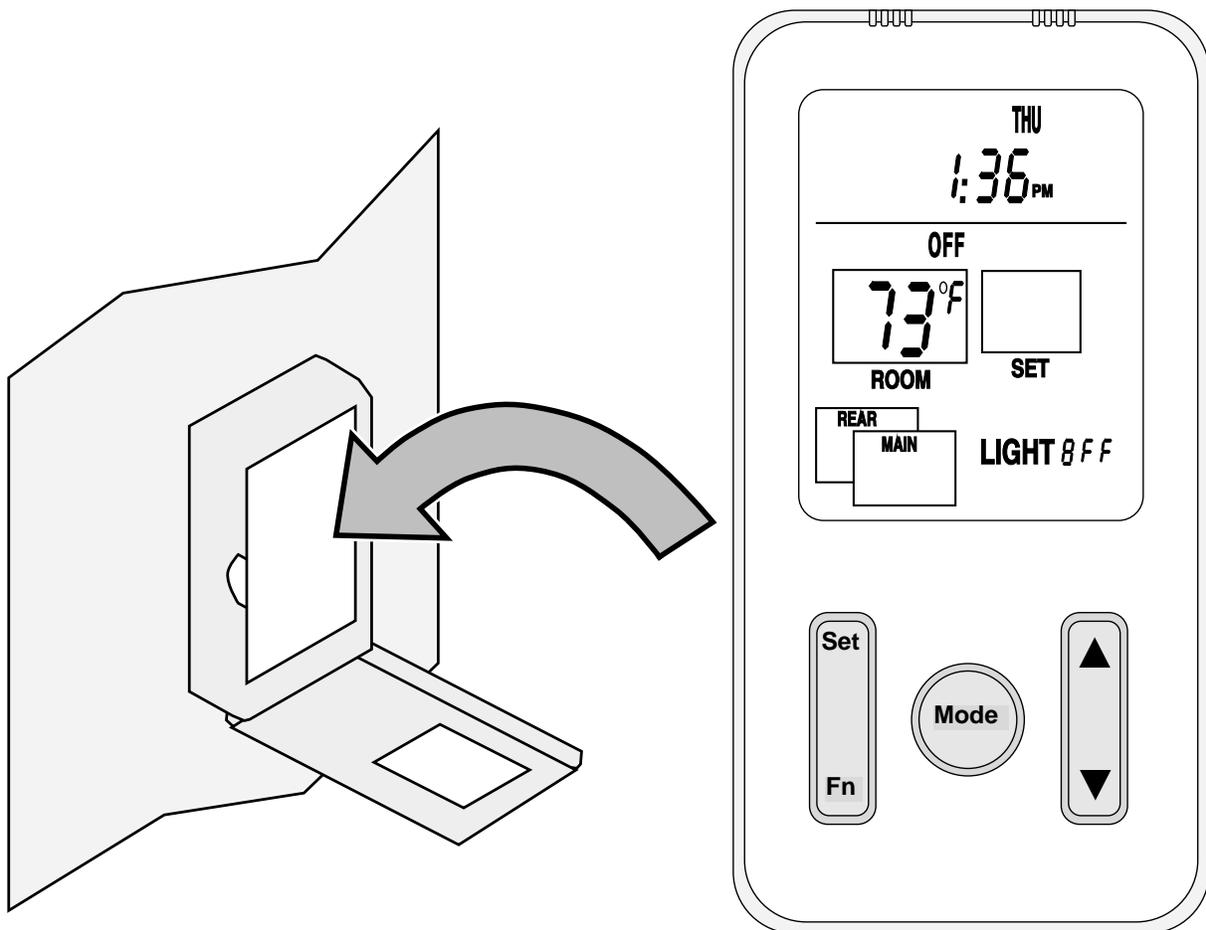

### ***Setting Up the Remote (Time, Day, Swing, °F/°C)***

---

The remote will need to be set up when first started or when the batteries were removed or replaced. Follow the directions below to set the time, day, and other settings.

- A. Press and hold the “Set” and “Up” arrow buttons for 5 seconds.
- B. The “ROOM” temperature will blink. Use the arrow keys until °F (fahrenheit) or °C (celcius) is displayed. Press the “Set” button to set the temperature scale.
- C. The “SWING” number will blink. This setting is not required when using this fireplace.
- D. The day of the week will blink. Use the arrow keys to select the correct day. Press the “Set” button to set the day.
- E. The hour of the day will blink. Use the arrow keys to select the correct hour. Press the “Set” button to set the hour.
- F. The minute of the hour will blink. Use the arrow keys to select the correct minute. Press the “Set” button to set the minute.
- G. The AM / PM designation will blink. Use the arrow keys to select the correct setting. Press the “Set” button to set AM / PM.


## Remote Synchronization

The remote control is shipped pre-synchronized to the fireplace. If, however, the remote does not work with the fireplace, follow the directions below to synchronize the remote to the fireplace.

**NOTE:** The fireplace must have power and the transmitter must have batteries to complete this process.

**WARNING:** Shut the gas off to the fireplace prior to conducting this process.

- 1 The "Learn" switch is accessed by removing a cover plate over the junction box. Inside the junction box to the side of the rheostat you will find the "Learn" switch (see the illustration below).
- 2 Press the "Learn" button once. The fireplace will beep once.
- 3 Press the "Mode" button on the remote. The fireplace will beep five times to indicate synchronization.

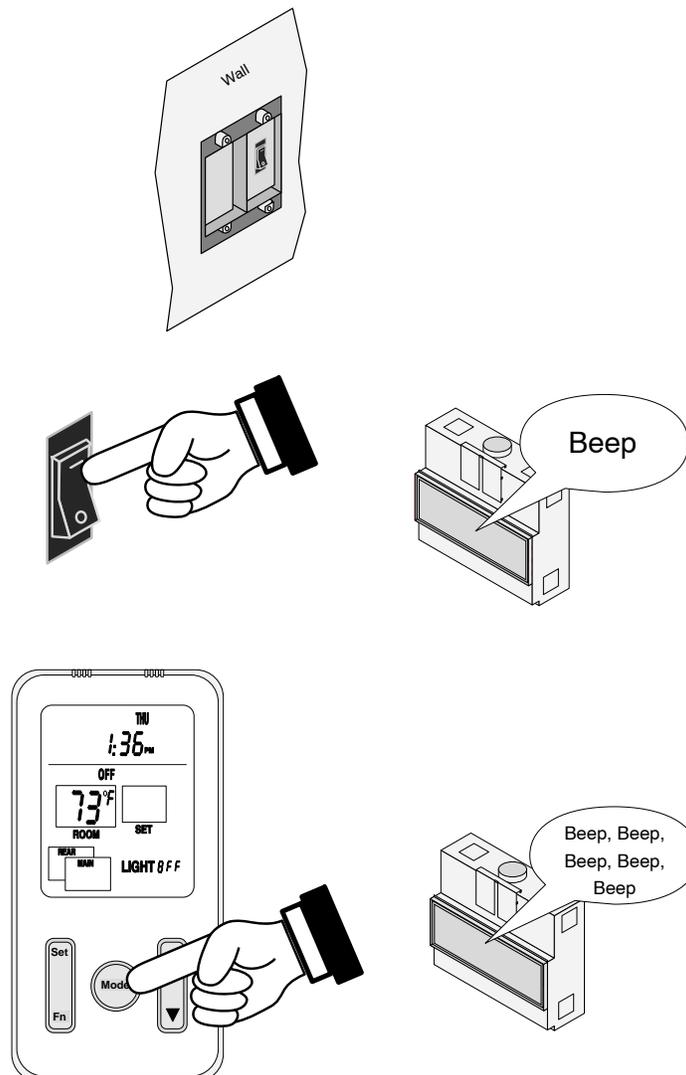



### **NOTE: Re-setting the Receiver Module**

If the receiver module fails to synchronize with the remote or wall switch after two attempts, you should re-set the receiver module. To do this, hold down the LEARN button for approximately 10 seconds until the receiver beeps 3 times. This indicates the receiver has been re-set and can be synchronized using the instructions above.

## The Two Modes of Operation


### Manual Mode

In manual mode you can turn the fireplace on and off by pressing the “Mode” button until “ON” or “OFF” appears on the remote.

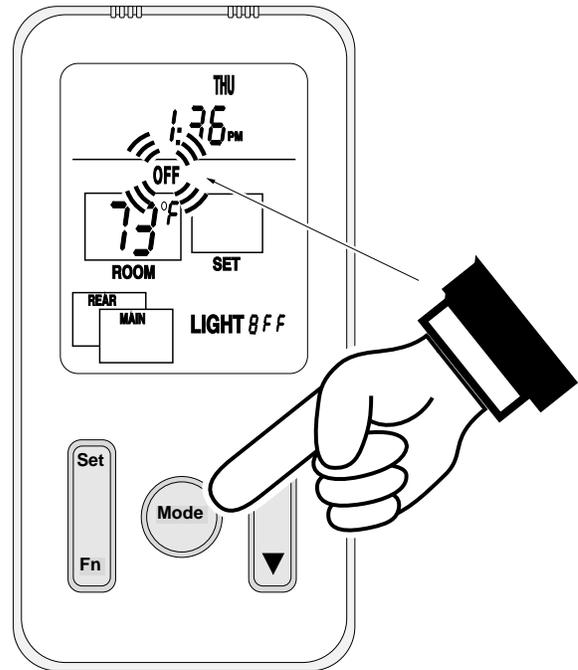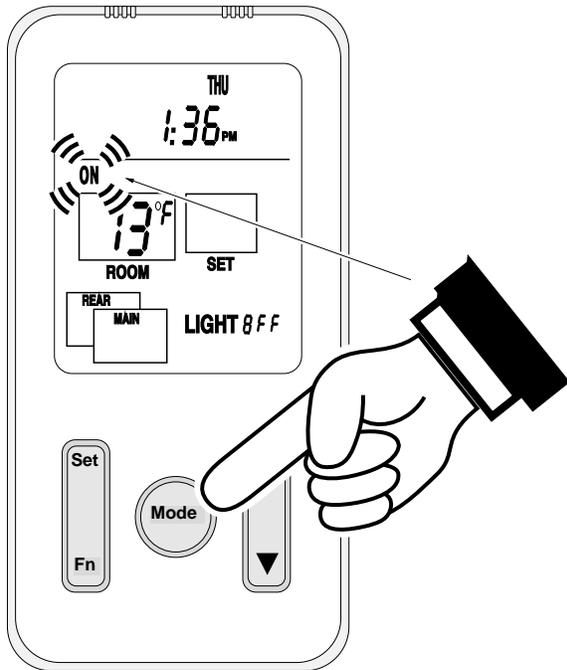

### Thermostat Mode

Thermostat mode is not used on this fireplace. Because the fireplace is not intended for use as a fireplace, do not use the thermostat mode. Continue to press the “MODE” button on the remote until “ON” or “OFF” appear.

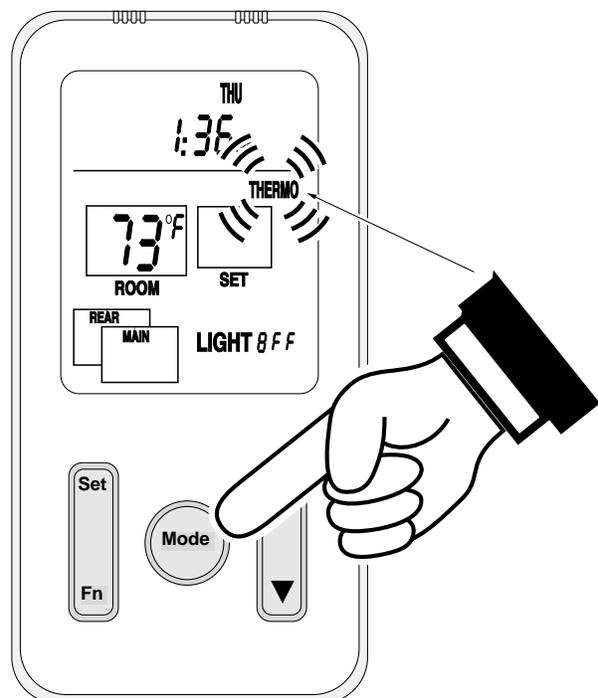

## Remote Functions

### Switching Between Remote Functions

By pressing the Function “FN” button, you can scroll through the following 7 functions on the remote:

#### **MAIN (Main Burner)**

This function will only appear when burner is on.

The burner flame height may be adjusted from low “1” to high “3”. Use the arrow keys to adjust the setting. Once the desired setting is made, the remote will alter the setting after approximately 8 seconds (and the remote display will stop blinking).

**NOTE:** The fireplace must be on (either manual or thermostat) to adjust the main burner.

#### **REAR (Outside Burner)**

This function turns the outside burners on and off.

#### **FAN**

This function may be used with an optional power heat duct.

#### **LIGHT**

This function adjusts the built-in accent light.

The built-in accent light located inside the fireplace may be adjusted from “OFF” to high “3” (a total of 4 settings). Use the arrow keys to adjust the setting. Once the desired setting is made, the remote will alter the setting after approximately 8 seconds (and the remote display will stop blinking).

#### **AUX (Optional 120V Switch)**

This function turns the lights below the burner on and off.

#### **TIMER**


This function allows the user to turn the fireplace on for a set period of time.

The timer function allows you to turn the fireplace on from 10 to 180 minutes. Use the arrow keys to select the desired time. The fireplace will then turn off after the specified time. Once the desired setting is made, the remote will alter the setting after approximately 8 seconds (and the remote display will stop blinking).

**NOTE:** The fireplace must be in manual mode, and on, for the timer function to work.

#### **PROGRAM (Programmable 7 day thermostat)**


This function allows the user to program specific on/off, temperature, weekday and weekend settings on the thermostat.

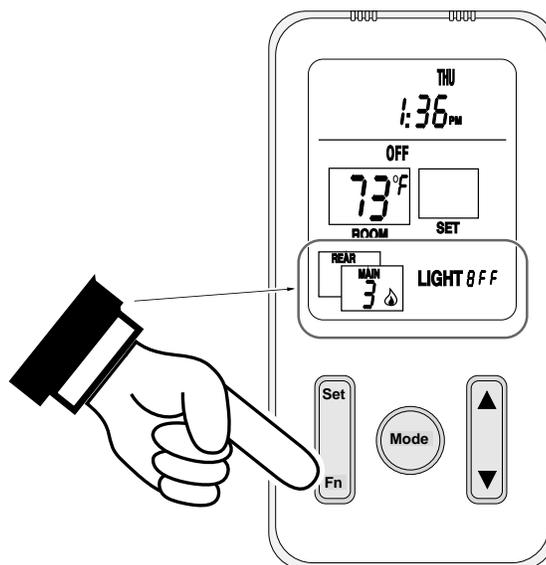

## **PROGRAM FUNCTION (7 day thermostat)**

The program function operates as follows:

- Each day has two periods (P1 , P2). Each period has an “ON” time and an “OFF” time.
- Each period is programmed for weekdays (Monday through Friday) and weekends (Saturday and Sunday).
- Each period has a set temperature.

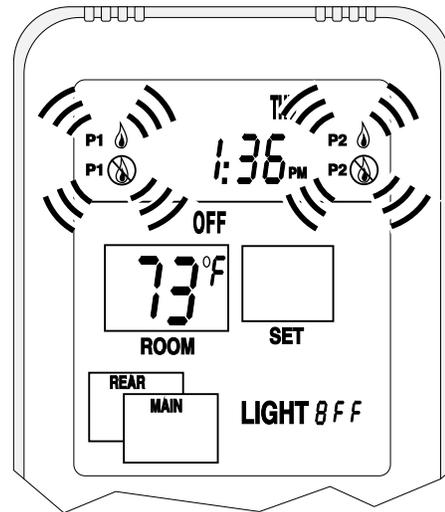

The remote comes pre-programmed for the following:

- Monday through Friday P1 ON @ 6:00AM OFF @ 8:00AM 70°F.
- Monday through Friday P2 ON @ 6:00PM OFF @ 9:00PM 70°F.
- Saturday and Sunday P1 8:00AM to 10:00AM 70°F.
- Saturday and Sunday P2 7:00AM to 10:00PM 70°F.

To adjust the program times and temperatures, do the following:

- Press the Function (“Fn”) Key until the program functions start to blink.
- Press the “Set” button for 5 seconds.
- The P1 “ON” time will blink. Use the arrows to select the desired time.
- Press the “Set” button. This sets the P1 “ON” time.
- The temperature will blink. Use the arrows to select the desired temperature (set it to the highest temperature if you wish for the fireplace to remain on regardless of temperature).
- Press the “Set” button. This sets the temperature for P1.
- The P1 “OFF” time will blink. Use the arrows to select the desired time.
- Press the “Set” button. This sets the P1 “OFF” time.
- REPEAT STEPS “C” through “H” for P2.
- REPEAT STEPS “C” through “H” for the weekend P1 and P2.

**NOTE:** P2 must start after 4:00PM.

**To Turn PROGRAM FUNCTION ON**

- Press the Function (“Fn”) Key until the program functions start to blink.
- Press the “Set” button. You will notice the P1 or P2 symbol will appear in the program section of the remote next to the time. This indicates the remote is in PROGRAM FUNCTION (Programmable thermostat).

**To Turn PROGRAM FUNCTION OFF**

- Press the Function (“Fn”) Key to select either manual or thermostat mode.

---

**Continuous Pilot – NOT USED FOR THIS FIREPLACE**

---

THIS FIREPLACE SHOULD NOT BE RUN IN CONTINUOUS PILOT. THIS MAY LEAD TO PREMATURE BLOWER FAILURE AND/OR COLD AIR INFILTRATION INTO THE FIREPLACE. IF “CONTINUOUS PILOT” APPEARS ON THE LCD SCREEN, FOLLOW THE DIRECTIONS BELOW TO TURN OFF THIS FEATURE.

**Turning Off Continuous Pilot**

Press and hold down the “Set” and “Down” arrow buttons. “Continuous Pilot” will no longer appear on the LCD screen, indicating the fireplace is no longer configured for continuous pilot.

---

**Normal Operating Sounds**

---

This fireplace uses an exhaust blower to pull exhaust gases out of the fireplace. While the fireplace is on you may hear a slight hum.

---

**Normal Operating Odors**

---

This appliance has several areas that reach high temperatures. Dust or other particles on these areas may burn and create an odor. This is normal during start-up. You may notice the smell is more acute if the appliance was left idle for a long period.

---

**Power Outages**

---

This fireplace utilizes household power (110 VAC) to power the exhaust blower. It does not operate if power has been shut off. If power goes out while fireplace is on, the burners will turn off and the fireplace will remain off until power is restored.

---

**Child Protection Feature**

---

The remote can be disabled to prevent children from operating the fireplace. This is done by holding down the “Fn” and “Up” button for 5 seconds until “CP” (Child Protection) appears on the screen in the “ROOM” temperature box. If any button is pressed on the remote “CP” will appear on the screen indicating the child protection feature is on. To turn this feature off, hold down the “Fn” and “Down” button for 5 seconds until “CP” (Child Protection) disappears on the screen in the “ROOM” temperature box

## Yearly Service Procedure

---



**WARNING:** Prior to removing the glass, shut off gas to the appliance (or shut off electricity to the fireplace). This prevents any chance of accidental burner ignition when accessing the firebox.

- Failure to inspect and maintain the fireplace may lead to improper combustion and a potentially dangerous situation. We recommend the following procedures be done by a qualified technician.
1. Remove the glass frame. Check the firebox for sooting. If excessive sooting is found, the fireplace will require adjustment. Contact your dealer.
  2. Inspect the burner and remove any debris. Brush aside the crushed glass to allow for a complete inspection.
    - Make sure the burner is not warped, cracked, or damaged.
    - Check the firebox and area around the pilot to make sure there is no warping or damage.
    - If any problem is found, discontinue use and contact your dealer for service.
  3. Clean and replace the glass frame. If the glass frame is damaged, replace. Make sure the gasket along the perimeter of the glass frame contacts the face of the firebox and forms an air-tight seal. If it does not, re-align or replace the gasket to insure an air-tight seal.
  4. Start the burner. The flames should be orange/yellow and not touch the top of the firebox (see photo below). If the pilot or main burners do not burn correctly, contact your dealer for service.



5. Remove any debris or vegetation near the vent termination. Contact your dealer if any sooting or deterioration is found near the vent termination.

## Glass Cleaning

---

The glass on the glass frame may be cleaned with a non-abrasive cleaner. To clean the inside of the glass, simply remove the glass frame, place it on a non-scratching surface, and clean the inside surface.

**WARNING:** do not operate the fireplace without the glass frame in place.

## Accent Light Bulb Replacement

---

**WARNING:** Use only 35 Watt 120 Volt T4 Halogen Bulbs (G6.35 Base)

Several accent lights are included in your fireplace to provide additional lighting. Contact your dealer for replacement information.

## Replacement Parts List

**Caution:** Use only Travis Industries replacement parts. Do not use substitute materials.


**Warning:** Do not operate appliance with the glass front removed, cracked, or broken. Replacement of the glass should be done by a licensed or qualified service person.

**Note:** The glazing/frame (glass) assembly shall only be replaced as a complete unit as supplied by Travis Industries.

250-00022	LIGHT BULB, HALOGEN 35W- 5 pk#
250-00319	WIRE HRNS PIG-TAIL, PWER HEAT
250-01352	GSKT, WIRE PLT, DVL-DVS/21 TRV
250-01525	REMOTE LEARN SWITCH,
250-01516	MULTI-FNCTN ALPHA TRANSMITTER-
250-00312	SNAP-DISC - 120deg NO #
250-01509	LIGHT ASS'Y, 36CF PIER/ST/EXTR
250-00114	PILOT ASS'Y, NG - 36/1080 CF/
250-00391	FLEX PIPE, 3/8"od x 12 BLK - #
250-00401	ORIFICE, BURNER - No. 46 #
250-00862	FLEX PIPE, 3/8 x 8-1/2
250-01745	VALVE w/STP MTR(ALPHA), AF4000
250-01506	EXTENSION MODULE, 120V,
250-01510	CONTROL MODULE, MAIN,
90-0791	DRAFT (FLOW) SWITCH #
250-00482	CERAMIC BRICK RETAINERS
250-00557	START COLLAR (ONLY), 6" #
250-01014	A/C ADAPTER, 1080/36 CF/EXTRM
250-01857	WALL PLATE, NYLON(BLANK) 2 DVC
250-01858	VACUUM TUBING, DRAFT, 10" LGTH
250-01859	FLEX DUCT CONNECTOR, 6" (6FC6)
250-01860	SET&VENT COMPONENTS BOX, XTRME
250-01861	FLEX DUCT ASS'Y, 6" x 20"
250-01862	GLASS TOOL (NICKEL PLATED)
250-01863	POWER EXHAUST INTERFACE
250-01864	ORIFICE, BURNER - No. 25 - NG
250-01865	REAR BURNER MOD. BLOCK VALVE-
250-01866	RELAY ADAPTOR, 120Vac INTRKNG
250-01867	TRANSFORMER, 120V-24V(XTR/TMP)
250-01868	RELAY, 4-PIN 120Vac
250-01869	WIRE HRNS EXT, 3-PRNG PLG(32")
250-01870	TERMINAL BLOCK, TOUCH-SAFE
250-01871	BURNER ASS'Y, B59 MAIN - XTR
250-01872	BURNER ASS'Y, B59 REAR - XTR
250-01873	SCREEN DROP IN ASS'Y, XTRME
250-01874	GLASS w/FRM ASS'Y, XTREME
250-01875	MAGNET, SUPER NEODYM DISC(BLK)
250-01876	EXHAUST BOX ASS'Y, XTREME
250-01877	INTAKE DAMPER ASSY, XTREME
250-01878	BOARD KIT, EXTREME FPL 6 PC.
250-01879	RHEOSTAT ASSY - EXTREME FPL
250-01880	CRUSHED TMPRD GLS,1/4 PLATINUM
250-01881	STOVE PACK, XTREME 6020

A detailed list of replacement parts may also be found through your dealer at [travisdealer.com](http://travisdealer.com).

## Wiring Diagram

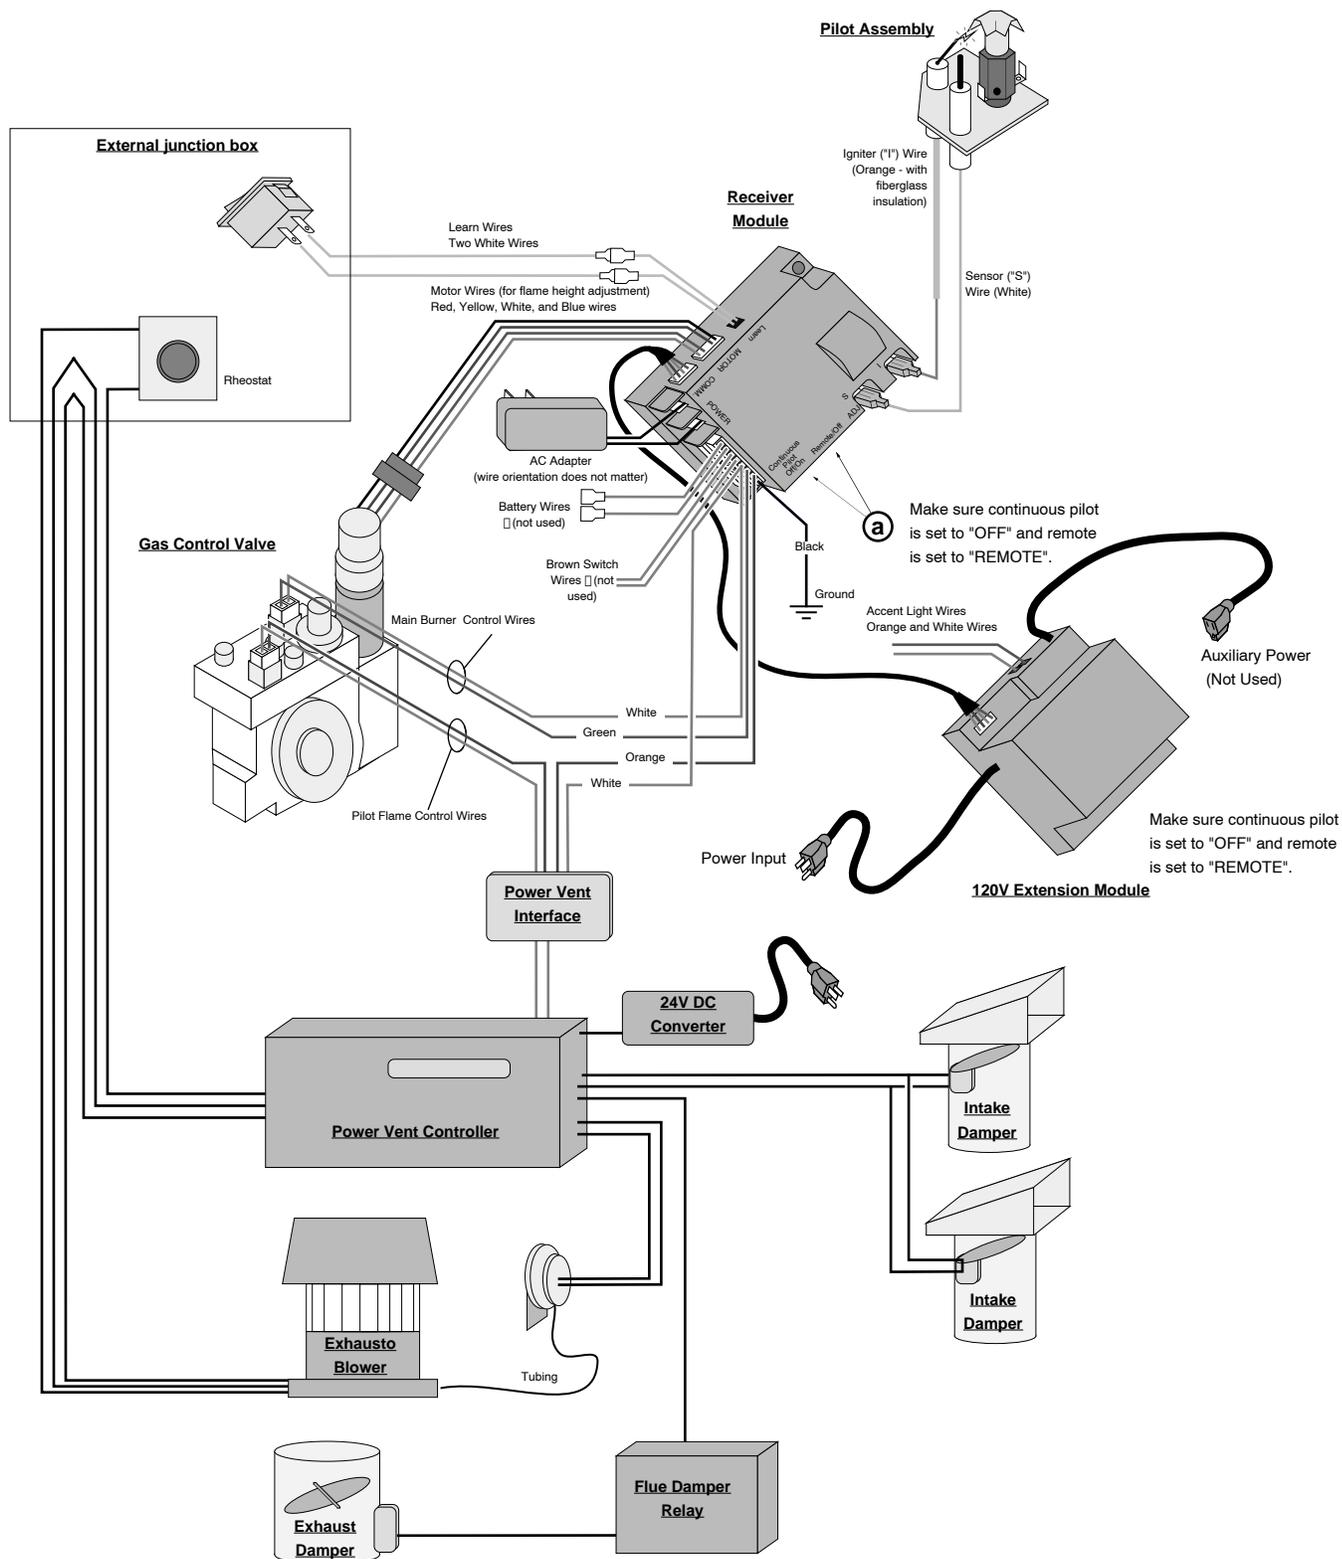

**Caution:** Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

Register your TRAVIS INDUSTRIES, INC. Limited 7 Year Warranty online at [traviswarranty.com](http://traviswarranty.com), or complete the enclosed Warranty card and mail it within **ten (10)** days of the appliance purchase date to: TRAVIS INDUSTRIES, INC., 4800 Harbour Pointe Blvd. SW, Mukilteo, WA 98275. TRAVIS INDUSTRIES, INC. warrants this gas appliance (appliance is defined as the equipment manufactured by Travis Industries, Inc.) to be defect-free in material and workmanship to the original purchaser from the date of purchase as follows:

Check with your dealer in advance for any costs to you when arranging a warranty call.  
Mileage or service charges are not covered by this warranty. This charge can vary from store to store.

Component	Years 1 & 2 Parts & Labor	Years 3 Through 5 Parts & Labor	Years 6 & 7 Parts Only
<b>Burner Assembly</b> Burner Pan Assembly, Air Shutter Assembly, Main Burner Orifice	✓		
<b>Electrical Assembly (within fireplace structure):</b> Wiring harness, snap discs, rheostat speed control	✓		
<b>Gas Control Assembly</b> Adjustable control valve, fireplace controller, pilot assembly and pilot wiring	✓		
<b>Glass</b> Glass (breakage from thermal shock)	✓		
<b>Ceramic Logs</b> Log Set, Embers	✓		
<b>Gold, Nickel &amp; Copper Plating</b> Face & Door (see "Conditions and Exclusions" # 9)	✓		
<b>Accessories</b> Firebacks, Power Heat Ducts, Andirons, etc...	✓		
<b>One-Way Freight Allowance</b> One-way freight allowance on pre-authorized repair done at factory is covered.	✓	✓	
<b>Convection Heat Exchanger</b> Convection heat exchanger assembly	✓	✓	
<b>Firebox Assembly</b> Adjustable Air Restrictor, Pressure Relief Mechanisms, Glass Attachment Mechanism	✓	✓	✓

**EXCLUDED COMPONENTS:**

Paint, Gasketing, and Accent Light Bulbs

**CONDITIONS & EXCLUSIONS**

- This new gas appliance must be installed by a qualified gas appliance technician. It must be installed, operated, and maintained at all times in accordance with the instructions in the Owner's Manual. Any alteration, willful abuse, accident, neglect, or misuse of the product shall nullify this warranty.
- This warranty is nontransferable, and is made to the ORIGINAL purchaser, provided that the purchase was made through an authorized TRAVIS dealer.
- Discoloration and some minor expansion, contraction, or movement of certain parts and resulting noise, is normal and not a defect and, therefore, not covered under warranty. The installer must ensure the appliance is burning as per the rating tag at the time of installation. Over-firing (operation above the listed BTU rate) of this appliance can cause serious damage and will nullify this warranty.
- The warranty, as outlined within this document, does not apply to the chimney components or other Non-Travis accessories used in conjunction with the installation of this product. If in doubt as to the extent of this warranty, contact your authorized TRAVIS retailer before installation.
- Travis Industries will not be responsible for inadequate performance caused by environmental conditions such as nearby trees, buildings, roof tops, wind, hills or mountains or negative pressure or other influences from mechanical systems such as furnaces, fans, clothes dryers, etc.
- This Warranty is void if:
  - The unit has been operated in atmospheres contaminated by chlorine, fluorine or other damaging chemicals.
  - The unit is subject to submersion in water or prolonged periods of dampness or condensation.
  - Any damage to the unit, combustion chamber, heat exchanger or other components due to water, or weather damage which is the result of, but not limited to, improper chimney/venting installation.
- Exclusions to this 7 Year Warranty include: injury, loss of use, damage, failure to function due to accident, negligence, misuse, improper installation, alteration or adjustment of the manufacturer's settings of components, lack of proper and regular maintenance, damage incurred while the appliance is in transit, alteration, or act of God.
- This 7 Year warranty excludes damage caused by normal wear and tear, such as paint discoloration or chipping, worn or torn gasketing, corroded or cracked logs, embers, etc. Also excluded is damage to the unit caused by abuse, improper installation, modification of the unit, drilling of the orifices, or the use of fuel other than that for which the unit is configured. Units are shipped for natural gas and must be converted to propane using the included conversion kit. Confirm fuel configuration with your installer.
- Damage to gold or nickel surfaces caused by fingerprints, scratches, melted items-, or other external sources left on the gold or nickel from the use of cleaners other than denatured alcohol is not covered in this warranty.
- TRAVIS INDUSTRIES, INC. is free of liability for any damages caused by the appliance, as well as inconvenience expenses and materials. Incidental or consequential damages are not covered by this warranty. In some states, the exclusion of incidental or consequential damage may not apply.
- This warranty does not cover any loss or damage incurred by the use or removal of any component or apparatus to or from the gas appliance without the express written permission of TRAVIS INDUSTRIES, INC. and bearing a TRAVIS INDUSTRIES, INC. label of approval.
- Any statement or representation of TRAVIS products and their performance contained in TRAVIS advertising, packaging literature, or printed material is not part of this 7 year warranty.
- This warranty is automatically voided if the appliance's serial number has been removed or altered in any way. If the appliance is used for commercial purposes, it is excluded from this warranty.
- No dealer, distributor, or similar person has the authority to represent or warrant TRAVIS products beyond the terms contained within this warranty. TRAVIS INDUSTRIES, INC. assumes no liability for such warranties or representations.
- Travis Industries will not cover the cost of the removal or re-installation of hearths, facing, mantels, venting or other components.
- If for any reason any section of this warranty is declared invalid, the balance of the warranty remains in effect and all other clauses shall remain in effect.
- THIS 7 YEAR WARRANTY IS THE ONLY WARRANTY SUPPLIED BY TRAVIS INDUSTRIES, INC., THE MANUFACTURER OF THE APPLIANCE. ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED AND PURCHASER'S RECOURSE IS EXPRESSLY LIMITED TO THE WARRANTIES SET FORTH HEREIN.

**IF WARRANTY SERVICE IS NEEDED:**

- If you discover a problem that you believe is covered by this warranty, you MUST REPORT it to your TRAVIS dealer WITHIN 30 DAYS, giving them proof of purchase, the purchase date, and the model name and serial number.
- Travis Industries has the option of either repairing or replacing the defective component.
- If your dealer is unable to repair your appliance's defect, he may process a warranty claim through TRAVIS INDUSTRIES, INC., including the name of the dealership where you purchased the appliance, a copy of your receipt showing the date of the appliance's purchase, and the serial number on your appliance. At that time, you may be asked to ship your appliance, freight charges prepaid, to TRAVIS INDUSTRIES, INC. TRAVIS INDUSTRIES, INC., at its option, will repair or replace, free of charge, your TRAVIS appliance if it is found to be defective in material or workmanship within the time frame stated within this 7 year warranty. TRAVIS INDUSTRIES, INC. will return your appliance, freight charges (years 1 to 5) prepaid by TRAVIS INDUSTRIES, INC., to your regional distributor, or dealership.
- Check with your dealer in advance for any costs to you when arranging a warranty call. Mileage or service charges are not covered by this warranty. This charge can vary from store to store.



**Index**

Accent Light Bulb Replacement .....	13
Before You Begin .....	6
BTU Specifications .....	3
Child Protection Feature .....	12
Continuous Pilot – NOT USED FOR THIS FIREPLACE .	12
Features .....	3
Glass Cleaning .....	13
Important Information .....	2
Installation Warnings .....	2
Introduction .....	2
Normal Operating Odors .....	12
Normal Operating Sounds .....	12
Power Outages .....	12
PROGRAM FUNCTION (7 day thermostat) .....	11
Remote Control .....	6
Remote Functions .....	10
Remote Synchronization .....	8
Replacement Parts List .....	14
Safety Precautions .....	4
Setting Up the Remote (Time, Day, Swing, °F/°C) .....	7
Starting the Fireplace for the First Time .....	6
The Two Modes of Operation .....	9
Warranty .....	16
Wiring Diagram .....	15
Yearly Service Procedure .....	13